

FIRST CONNECTION

- Make sure you have installed on your PC* the InxpectSecurityPC Application
- Connect the RJ dongle cable (p/n: WSYNC-RJ-C) to MSK-101's dongle connector, then connect the RJ connector to the appropriate socket of the dongle. The led lights up
- Insert the dongle into its holder (p/n: MSK-101-DH)
- Now take the USB cable (p/n: 08000030), plug the USB Micro-B connector into the dongle USB socket (the holder has a hole for this purpose), then plug the other side of the USB cable into any USB port of your PC.
- No additional drivers or installation are required
- Launch the InxpectSecurityPC Application and follow the instructions in order to configure the MSK-101. No password is required

*The InxpectSecurityPC application is certified on Windows® 10.

